




> M59 Mask

AEROSEKUR

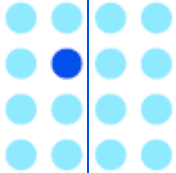

Main Features

- ❏ facepieces available in three sizes to fit any type of face
- ❏ very high protection factor
- ❏ wide field of vision



- ❏ good voice transmission
- ❏ easy and rapid donning and doffing (less than 7 sec)
- ❏ easy to decontaminate
- ❏ easy to be carried
- ❏ long shelf life (15 years)
- ❏ excellent mechanical and chemical characteristics
- ❏ lightweight
- ❏ permit the wearing of a helmet
- ❏ permit the use of corrective lenses
- ❏ easy and low maintenance
- ❏ issued to the Navy/army/airforces

Description M59/G


Facepiece of high quality, non allergenic special rubber compound. It has a soft turned peripheral lip and chinstrap for good and tight seal.

Eyepieces in triplex glass, providing the maximum field of vision. They are interchangeable and have a sealing rim.

Nose-cup divides the air flow inlet from the air flow outlet, thus keeping the eyepieces free from fogging even in low temperature and /or high humidity conditions.

Nato standard threaded inlet connector for coupling the mask to the canister. Includes the inlet valve.

The central position of the connector allows for the use of larger capacity canisters or corrugated hoses. The connection between the face pieces and the canister has been designed so as to provide a perfect seal even during movement and to assure a cushioning effect in case of accidental shocks.

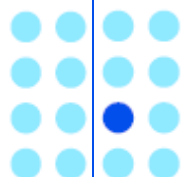


» next



> M59 Mask

AEROSEKUR

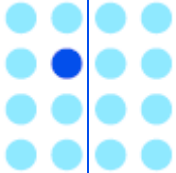

Speech diaphragm in a central position. It grants clear voice transmission and permits the use of megaphones, telephones while wearing the respirator.

Outlet valve assembly in a lateral position so it does not interfere with the speech diaphragm. It also allows for the discharge of the condensate.

Fully adjustable 5-straps rubber head harness, quick and easy to operate.

Technical Characteristics

Weight	0.49 kg. (approx)
Face seal	99.995%
Visual field of vision	77% of the natural one
Breathing resistance (40 l/min airflow)	Inlet: 50 Pa, Outlet: 120Pa
Protection time	4 hours HD, 6 hours VX

>] end

